




# Changing Nozzles ST-76

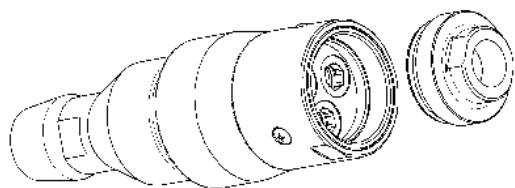


Unscrew inletnut

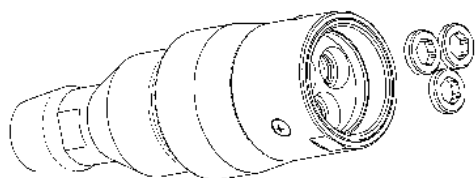


Unscrew nozzlenuts

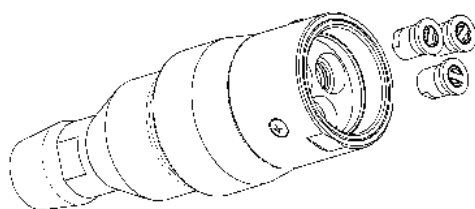

Put nozzles in nozzlehole

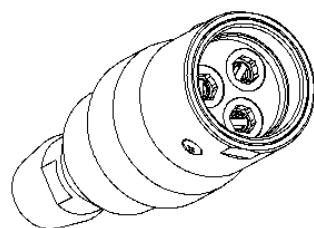

Screw nozzlenuts

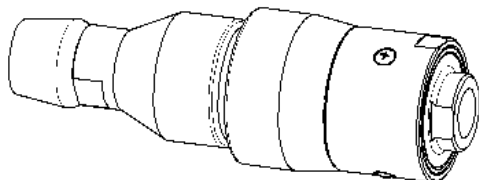

Screw inletnut